

KEYPAD EVENTS					
Key 0 on keypad	PA	Panic Alarm	NULL	Id. Peripheral UI	
Key 1 on keypad	PA	Panic Alarm	NULL	Id. Peripheral UI	
Key 2 on keypad	PA	Panic Alarm	NULL	Id. Peripheral UI	
Key 3 on keypad	PA	Panic Alarm	NULL	Id. Peripheral UI	
Key 4 on keypad	PA	Panic Alarm	NULL	Id. Peripheral UI	
Key 5 on keypad	PA	Panic Alarm	NULL	Id. Peripheral UI	
Key 6 on keypad	PA	Panic Alarm	NULL	Id. Peripheral UI	
Key 7 on keypad	PA	Panic Alarm	NULL	Id. Peripheral UI	
Key 8 on keypad	PA	Panic Alarm	NULL	Id. Peripheral UI	
Key 9 on keypad	PA	Panic Alarm	NULL	Id. Peripheral UI	
PROXIMITY READER EVENTS					
Green led on reader	UX	Undefined	NULL	Id. Peripheral UI	
Red led on reader	UX	Undefined	NULL	Id. Peripheral UI	
White led on reader	UX	Undefined	NULL	Id. Peripheral UI	
Blue led on reader	UX	Undefined	NULL	Id. Peripheral UI	
Yellow led on reader	UX	Undefined	NULL	Id. Peripheral UI	
COMMUNICATION EVENTS					
Communication failure to user	YC	Communications Fail	NULL	Id.Contact List	
Incoming call*	UX	Undefined	NULL	NULL	
C-ID communication done	UX	Undefined	NULL	NULL	
C-ID communication failure	YC	Communications Fail	NULL	Id. CID Receiver	
SIA communication done	UX	Undefined	NULL	NULL	
SIA communication failure	YC	Communications Fail	NULL	Id. SIA Receiver	
POWER EVENTS					
Main power loss	AT	AC Trouble	NULL	Id. Peripheral	
Main power restoral	AR	AC Restoral	NULL	Id. Peripheral	
Low battery	YT	System Battery Trouble	NULL	Id. Peripheral	
Low battery restoral	YR	System Battery Restored	NULL	Id. Peripheral	
Battery fault	YT	System Battery Trouble	NULL	Id. Peripheral	
Low power output	YP	Powe Supply Trouble	NULL	Id. Peripheral	
Low power output restoral	YQ	Power Supply Restored	NULL	Id. Peripheral	
Battery charger fault	YP	Powe Supply Trouble	NULL	Id. Peripheral	
Battery charger restoral	YQ	Power Supply Restored	NULL	Id. Peripheral	
Warning fuse	YI	Overcurrent Trouble	NULL	Id. Peripheral	
Warning fuse restoral	YJ	Overcurrent Restore	NULL	Id. Peripheral	
CRONOTERMOSTAT EVENTS					
Cronotermostat off*	UX	Undefined	NULL	Id. Chronothermostat	
Heater on*	ZH	Freeze Alarm Restore	NULL	Id. Chronothermostat	
Cooler on*	ZA	Freeze Alarm	NULL	Id. Chronothermostat	
REMOTE CONTROL EVENTS					
Disarm key	PA	Panic Alarm	NULL	Id. Remote Control	
Partial arm key	PA	Panic Alarm	NULL	Id. Remote Control	
Full arm key	PA	Panic Alarm	NULL	Id. Remote Control	
Long press on disarm key	PA	Panic Alarm	NULL	Id. Remote Control	
Long press on partial arm key	PA	Panic Alarm	NULL	Id. Remote Control	
Long press on total arm key	PA	Panic Alarm	NULL	Id. Remote Control	
Long press on info key	PA	Panic Alarm	NULL	Id. Remote Control	
CODE/TAG EVENTS					
Recognized user code	JP	User On Premises	NULL	Id. Account	
Recognized user key	JP	User On Premises	NULL	Id. Account	
MOTHER BOARD EVENTS					
Panel tamper	TA	Tamper Alarm	NULL	NULL	
Panel tamper restoral	TR	Tamper Restoral	NULL	NULL	
Configuration start	LB	Panel programming changed	NULL	NULL	
Configuration end	LX	Panel programming changed	NULL	NULL	
Periodic test	RP	Periodic test report	NULL	NULL	

